

TECHNICAL BULLETIN

TB # 0116.1

DATE: May 18, 2016

PRODUCT: Commercial Elevators

SUBJECT: Programming Auto-Homing at Controller

This change will be in the volatile memory - if the watch battery that holds the memory is ever replaced this will need to be repeated to make the changes again. If you want the changes permanent, a chip will need to be ordered and installed on site.

Page P of the Virginia Package has instructions and details of programming and can also help with this.

1. Make sure the car is empty and not running
2. Press next on the controller keypad and scroll thru options till go to setup menu is displayed
3. Press enter
4. There will be a warning displayed
5. Press enter
6. Display will show "reset factory defaults" we don't want to do this, press next
7. Press next until features menu and then press enter
8. Use next to scroll thru the features until homing is displayed and then press enter.
9. Press AUX to change choice to enable and then press enter
10. Press esc to back out of feature menu
11. Scroll to the settings menu
12. Press enter
13. Scroll thru settings till home landing is displayed and press enter
14. Use next and previous to change homing floor, press enter
15. Continue forward in the feature menu
16. When homing delay is shown press enter
17. Use next and previous to change the time in seconds before the elevator leaves to go to the home landing.
18. When finished press esc twice to back out of the menus.

Be sure to fully test the elevator.

Call CE technical support if you require any assistance with this procedure: Toll-free 1-866-209-3421