


SECTION K

E50 OVERWEIGHT SETUP

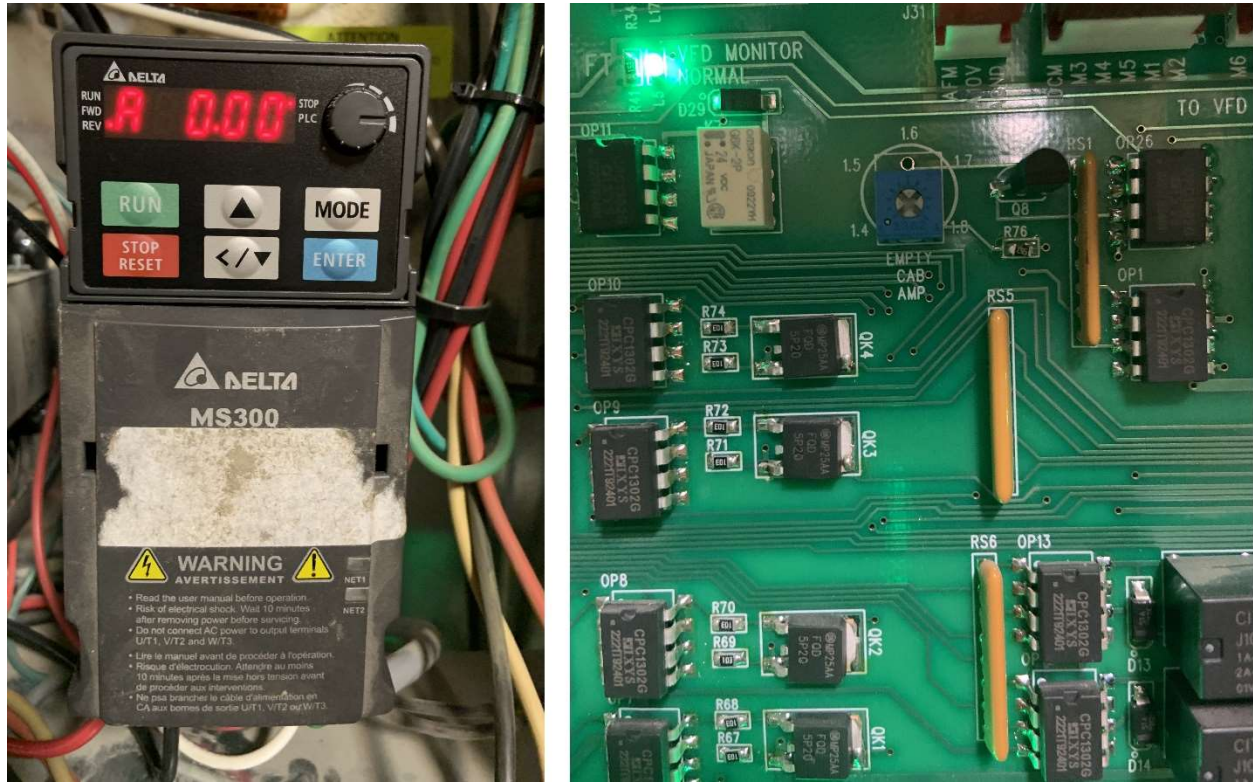

- 1) At the main controller, press the mode button on the VFD till you see A 0.00 on the screen (reference picture above).
- 2) Call the elevator to the bottom landing.
- 3) Send the empty elevator up.
- 4) While the elevator is going up, record the number on the VFD when it averages out.
- 5) Take that reading and adjust the blue potentiometer to match the VFD current reading. **Note: The amp is printed on the PC board and all around the potentiometer shows 1.4, 1.5, 1.6, 1.7, and 1.8.**
- 6) By doing this procedure, the weight range will be much better, within 550 lbs +/- 50 lbs.